




Set CLOCK menu :

Use this menu to adjust the MILUX clock to the actual time.

use +/- to adjust minutes  Press **OK** use +/- to adjust hours  Press **OK** use +/- to adjust days  Press **OK**




PROGRAM menu : By pressing + or - key the Program number start to blink,

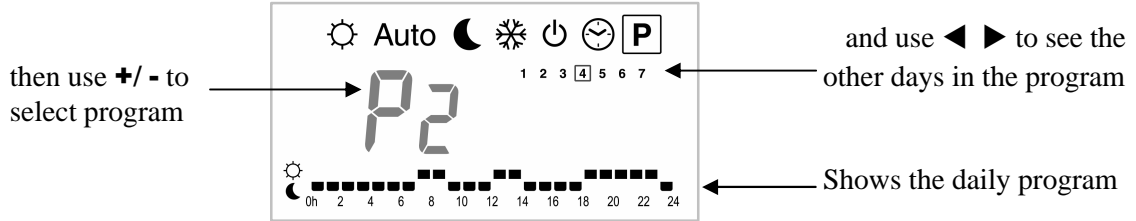


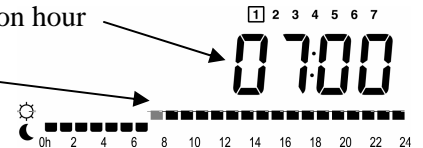
If you select a built-in program **P1** to **P9** and press **OK** this program will be followed in **Auto**
 If you select an user program **U1** to **U4** and press **OK** you will enter the USER PROGRAM EDITION.

USER PROGRAM EDITION :

Current blinking cursor position hour





The + key sets  temperature at the current blinking program hour




The - key sets  temperature at the current blinking program hour







Use **<>** keys to slide the blinking cursor position in the day and modify or correct easily the program
 When the displayed day is correct press **OK** to jump to the following day. When you press **OK** on the last day you will exit the User program edition and return to the top menu.



Now your user program will be followed if you put the MILUX in automatic operating mode **Auto**

 **HOLIDAY Function :** only for  comfort mode,  reduced mode or  anti-freeze mode.


With   keys go to  function. Then you can select with **+** or **-** keys the number of hours **0 | H** or the number of days **0 | d** before the MILUX automatically returns to **Auto** mode and continues to follow the program.

KEYPAD LOCK Function : function to prevent children from playing and changing the MILUX parameters

In , **Auto**, ,  and  operating modes you can maintain the **OK** key pressed and press simultaneously on the **+** or **-** key to lock (**Loc code**) or un-lock (**Un Loc**) the keypad.


HOT/COLD operation selection : Go to , maintain the **OK** key pressed and press simultaneously on  key
Then press **+** to choose Hot operation (**Mod Hot**) or press **-** to choose Cold operation (**Mod Col d**).

RESET Function : Erases all user programs and sets the MILUX factory parameters by default

Go to  OFF mode, maintain **+** and **-** keys pressed and press simultaneously on the **OK** key. All the segments will lit up during a few seconds showing that the MILUX has been erased and restarted with factory defaults parameters.


Factory parameters are :  21°C  17°C  6°C **U |** all comfort **HOT** operation

Then re-adjust the time and follow the **QUICK START** instructions.

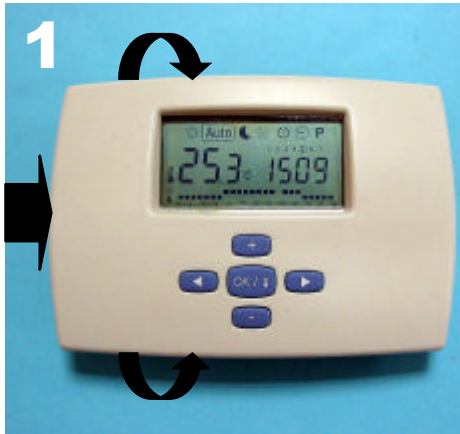


Press on then left side button and pull the front panel to remove it.

You now have access to the batteries.

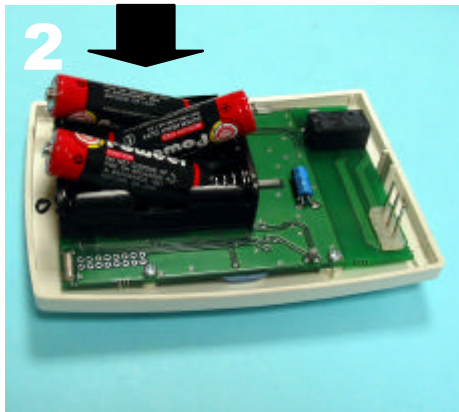

Replace the three LR6 AA 1.5V batteries with new ones (Alkaline cells recommended)

IMPORTANT: You have 1 minute to change the batteries

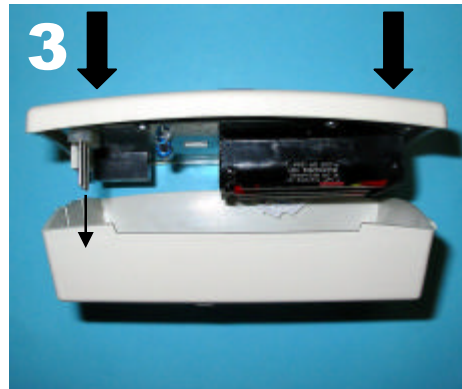

To close the MILUX,

Place the front panel in front of the rear part. Insert the three contacts in the connector holes. Then push the front panel while keeping it parallel to the rear part.

You can help the button to click by pressing slightly on it.